
TORQUE ADAPTER FORMULA

SUNEX® TOOLS

$$TS = TD\left(\frac{L}{L + A}\right)$$

TD (torque desired at end of adapter)

TS (torque wrench setting)

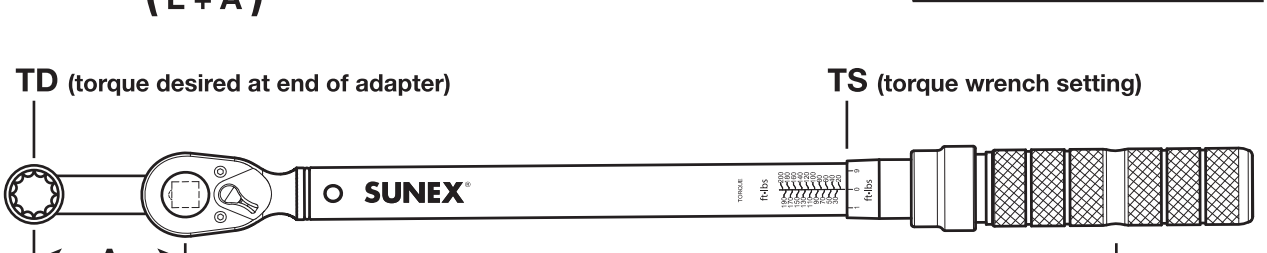

A
(length of adapter - center to center)

L
(length of torque wrench - drive center to handle center)